


GEBRUIK CONNECTORS HOEKZETEL

USE CONNECTORS CORNER SOFA

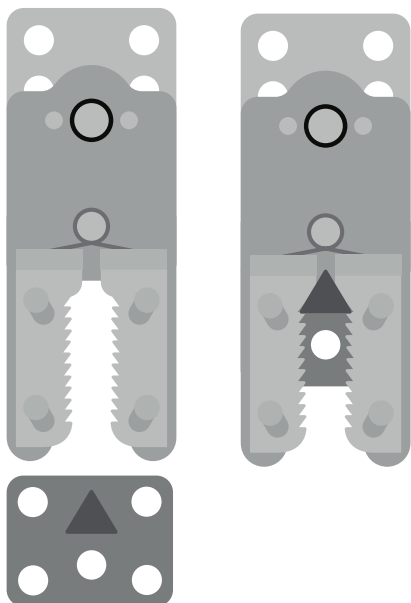

Connector en
metalen clip
LOS

Connector and
metal clip LOOSE

Connector en
metalen clip
VAST

Connector and
metal clip FIXED

PLAATSING

Het deel dat de metalen clips heeft is altijd de recamiere of longchair, en het deel met de metalen connectoren zit altijd aan het 3-zits 1 arm deel.

KOPPELEN & ONTKOPPELEN

Als je wilt ontkoppelen dan til je het recamiere/longchair deel op. De metalen connectoren kun je onder de zetel terug draaien.

Wil je de zetel weer in elkaar draaien, dan de connectoren recht voor de metalen clips zetten en de zetel delen tegen elkaar aan drukken. Je hoort een klik geluid, de zetel trekt zich weer vast.

PLACEMENT

The part that has the metal clips is always the recamiere or longchair, and the part with the metal connectors is always on the 3-seater 1 arm part.

CONNECT & DISCONNECT

If you want to disconnect, lift the recamiere/ longchair part. You can turn the metal connectors back under the sofa.

If you want to turn the sofa back together, put the connectors right in front of the metal clips and press the sofa parts against each other. You hear a click sound, the sofa tightens again.



Onderkant 3-zits 1 arm

Bottom 3-seater 1 arm



Onderkant
recamiere/
long chair

Bottom
recamiere/
long chair