


# GEBRUIK CONNECTORS ZETEL KAJ

## USE CONNECTORS SOFA KAJ

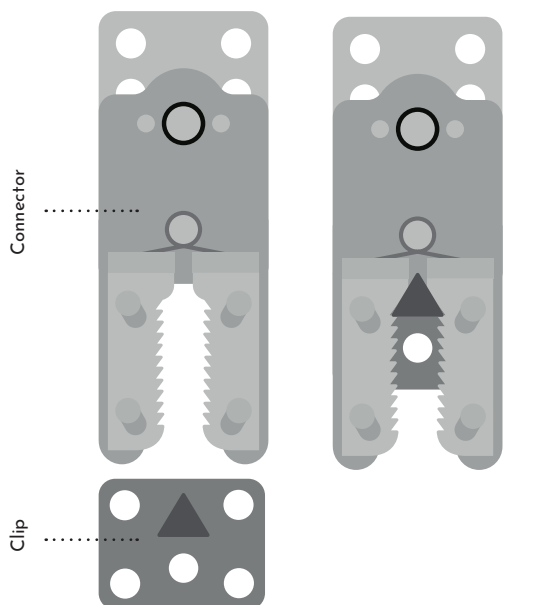

Connector en  
metalen clip  
LOS

Connector and  
metal clip LOOSE

Connector en  
metalen clip  
VAST

Connector and  
metal clip FIXED

### PLAATSING

Het deel dat de metalen clips heeft is altijd gevestigd aan het rechter zitgedeelte en het deel met de connectoren zit altijd aan het linker zitgedeelte. (Als je van het vooraanzicht naar de zetel kijkt.)

### KOPPELEN & ONTKOPPELEN

Als je wilt ontkoppelen dan til je het rechter zitgedeelte met de metalen clip op. De metalen connectoren kun je onder de zetel terug draaien.

Wil je de zetel weer in elkaar draaien, dan de connectoren recht voor de metalen clips zetten en de zetel delen tegen elkaar aan drukken. Je hoort een klik geluid, de zetel trekt zich weer vast.

### PLACEMENT

The part that has the metal clips is always located on the right seat area and the part with the connectors is always on the left seat area. (If you look at the sofa from the front view.)

### CONNECT & DISCONNECT

If you want to disconnect, lift the right seat area with the metal clip part. You can turn the metal connectors back under the sofa.

If you want to turn the sofa back together, put the connectors right in front of the metal clips and press the sofa parts against each other. You hear a click sound, the sofa tightens again.

