


GEBRUIK CONNECTORS HOEKBANK

USE CONNECTORS CORNER SOFA

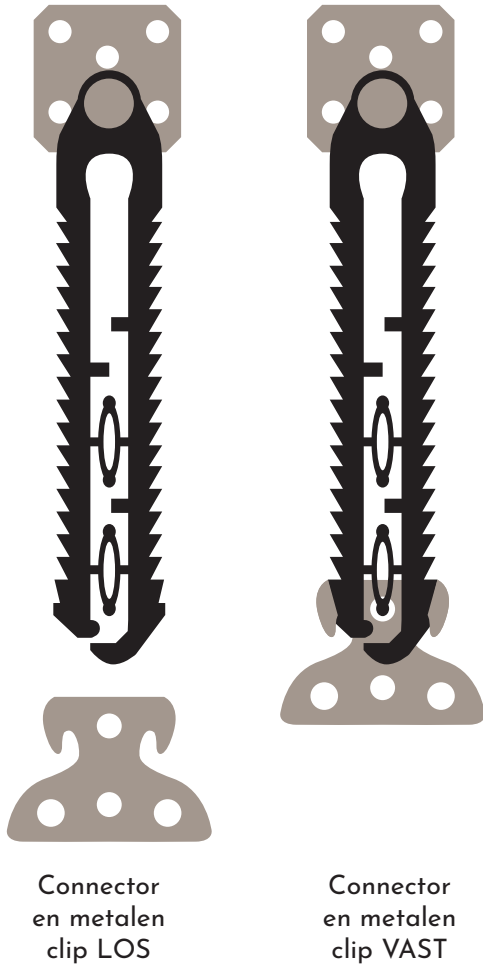

PLAATSING

Het deel dat de metalen clips heeft is altijd de recamiere of longchair, en het deel met de kunststof connectoren zit altijd aan het 3-zits 1 arm deel.

KOPPELEN & ONTKOPPELEN

Als je wilt ontkoppelen dan til je het recamiere/longchair deel op. De kunststof connectoren kun je onder de bank terug draaien.

Wil je de bank weer in elkaar draaien, dan de connectoren recht voor de metalen clips zetten en de bank delen tegen elkaar aan drukken. Je hoort een klik geluid, de bank trekt zich weer vast.

PLACEMENT

The part that has the metal clips is always the recamiere or longchair, and the part with the plastic connectors is always on the 3-seater 1 arm part.

CONNECT & DISCONNECT

If you want to disconnect, lift the recamiere/ longchair part. You can turn the plastic connectors back under the sofa.

If you want to turn the sofa back together, put the connectors right in front of the metal clips and press the sofa parts against each other. You hear a click sound, the sofa tightens again.

