


# GEBRUIK CONNECTORS HOEKBANK ODIN

## USE CONNECTORS CORNER SOFA ODIN

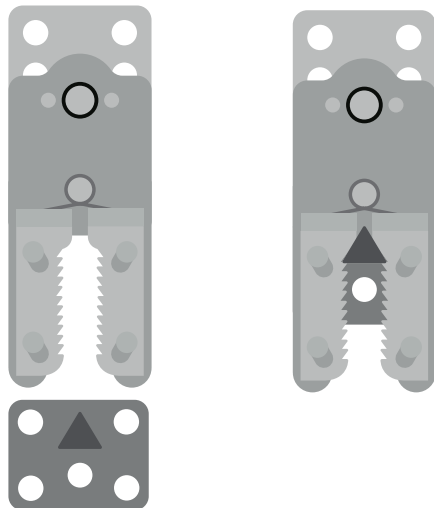

Connector en  
metalen clip  
LOS

Connector and  
metal clip LOOSE

Connector en  
metalen clip  
VAST

Connector and  
metal clip FIXED

### KOPPELEN & ONTKOPPELEN

De metalen clips zitten onder de longchair van de bank. Onder het andere deel van de bank zitten de metalen connectoren.

Als je de bankdelen wilt ontkoppelen dan til je de longchair met de metalen clips op. De metalen connectoren die onder het andere element zitten kun je onder de bank terug draaien.

Wil je de bankdelen weer aan elkaar koppelen, plaats dan de connectoren recht voor de metalen clips en druk de twee bankdelen tegen elkaar aan. Je hoort een klik geluid, de bankdelen trekken zich vast.

### CONNECT & DISCONNECT

The metal clips are located under the longchair of the sofa. Under the other part of the sofa are the metal connectors.

If you want to disconnect the sofa parts, lift the longchair with the metal clips. The metal connectors that are under the other element can be turned back under the sofa.

If you want to reconnect the sofa parts, place the connectors right in front of the metal clips and press the two sofa parts against each other. You will hear a click sound, the sofa parts will pull together.

