


UTILISATION DES CONNECTEURS DU CANAPÉ

USE CONNECTORS CORNER SOFA ODIN

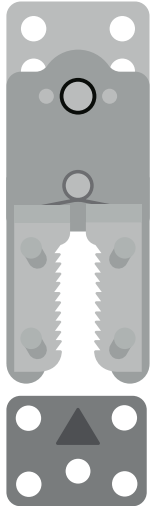

Connecteur et
plaque métallique
LIBRES

Connector and
metal clip **LOOSE**



Connecteur et
plaque métallique
SOLIDAIRES

Connector and
metal clip **FIXED**

CONNECTER ET DÉCONNECTER

Les plaques métalliques se trouvent sous la partie « chaise longue » du canapé. Les connecteurs métalliques se trouvent sous l'autre partie du canapé.

Si vous souhaitez déconnecter les éléments du canapé, soulevez le longchair comportant les plaques métalliques. Les connecteurs métalliques qui se trouvent sous l'autre élément peuvent être retournés sous le canapé.

Si vous voulez reconnecter les éléments du canapé, placez les connecteurs juste en face des plaques métalliques et pressez les deux éléments du canapé l'un contre l'autre. Vous entendez un déclic, indiquant que les éléments du canapé sont à présent solidaires.

CONNECT & DISCONNECT

The metal clips are located under the longchair of the sofa. Under the other part of the sofa are the metal connectors.

If you want to disconnect the sofa parts, lift the longchair with the metal clips. The metal connectors that are under the other element can be turned back under the sofa.

If you want to reconnect the sofa parts, place the connectors right in front of the metal clips and press the two sofa parts against each other. You will hear a click sound, the sofa parts will pull together.

